


BRIGHTWELL

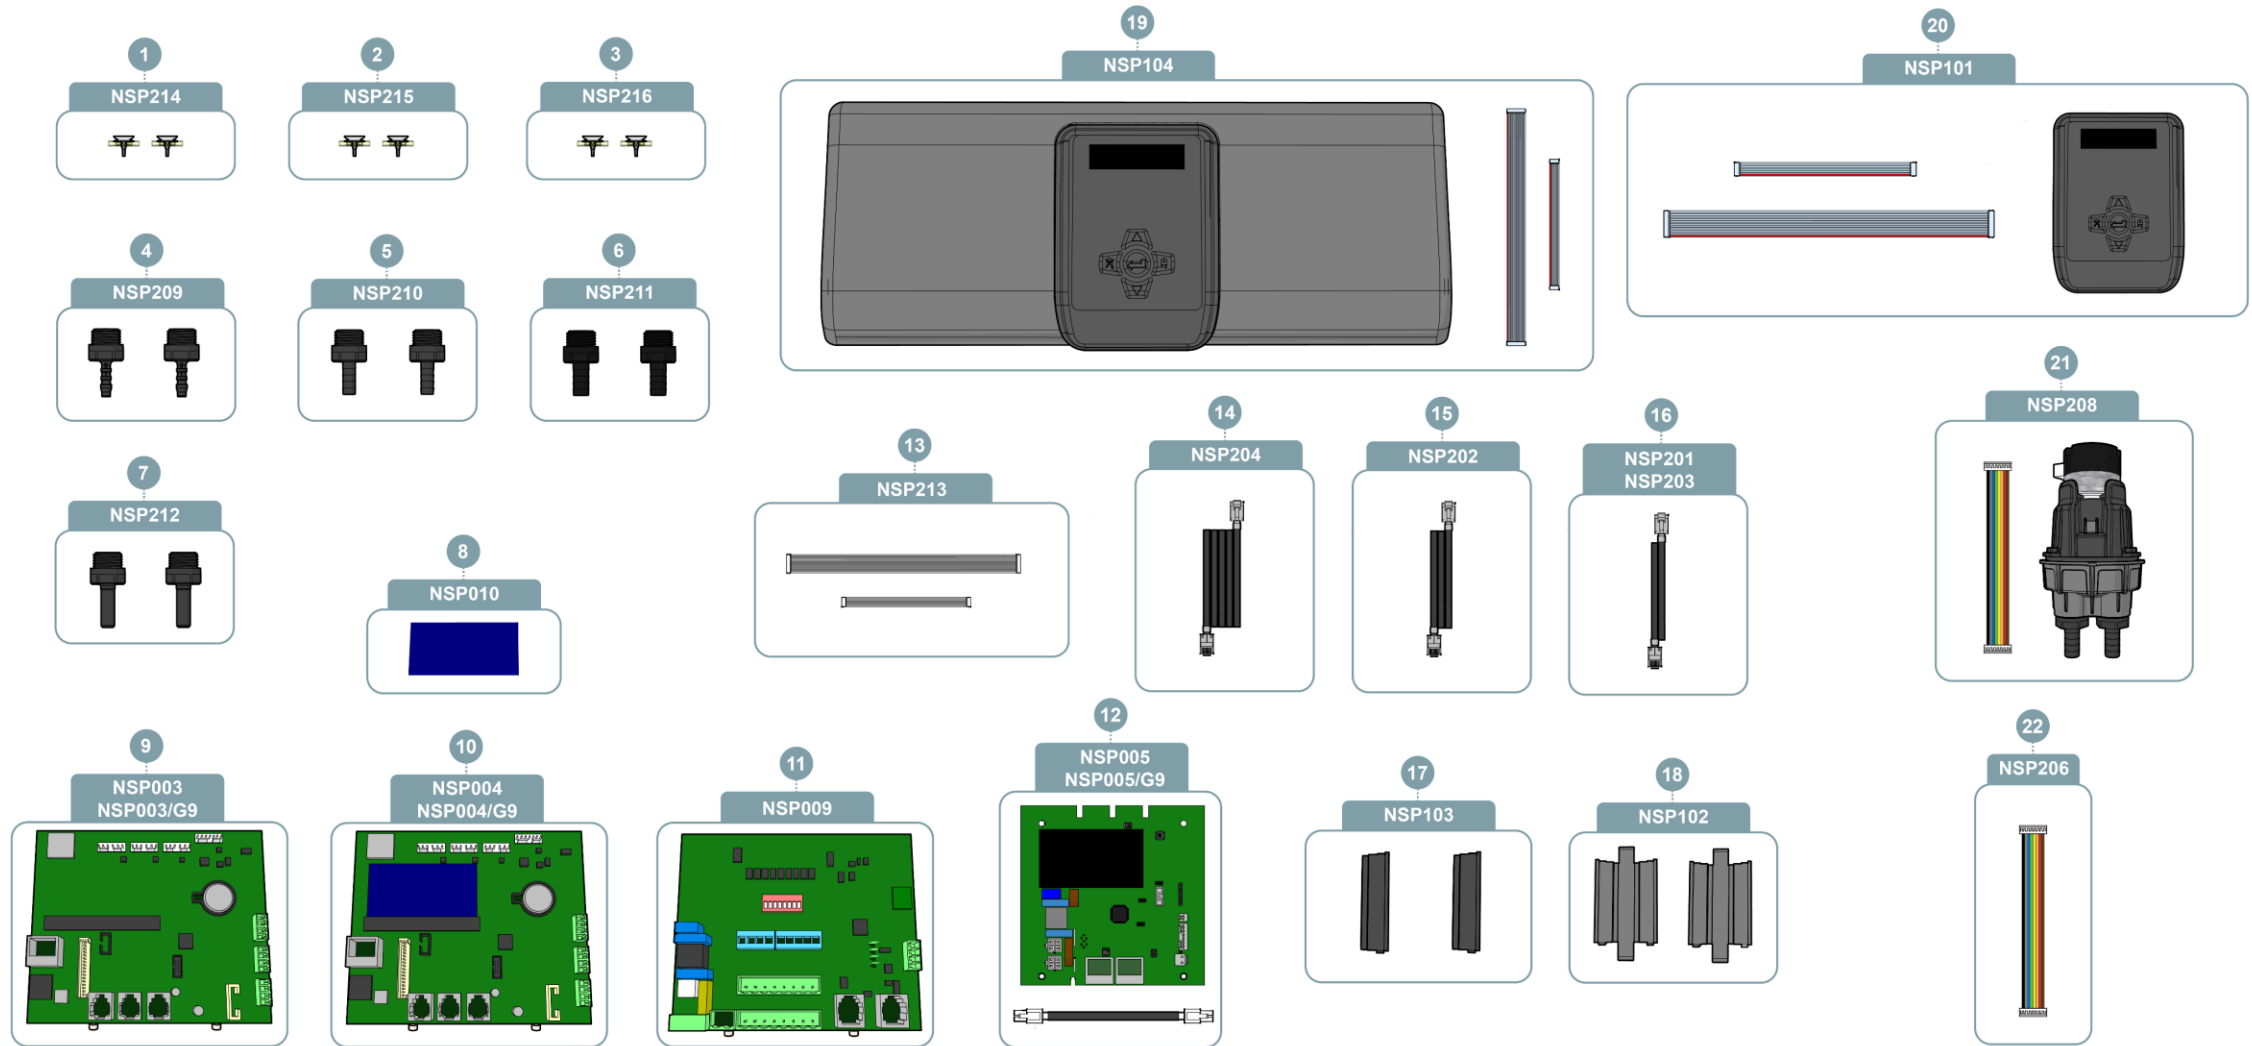

Nexus Spares Diagram

Item	Description	Spares Code
1	8 x N4410/EXT (NRV) & 8 x N3909 (NRV Washer) & 1 x A456	NSP214
2	8 x N4410/EPDM (NRV) & 8 x N3909 (NRV Washer) 1 x A456	NSP215
3	8 x N4410/VIT (NRV) & 8 x N3909 (NRV Washer) 1 x A456	NSP216
4	¼ Inch Barbed Connector Pack x 8	NSP209
5	8mm Barbed Connector Pack x 8	NSP210
6	10mm Barbed Connector Pack x 8	NSP211
7	10mm Push Fit Connector Pack x 8	NSP212
PLEASE NOTE – When ordering replacement connectors, it is advised to replace the NRV's at the same time. Make sure to order these together.		
8	Nexus SOM Board	NSP010
9	Nexus Main Control PCB	NSP003 - NSP003/G9
10	Nexus Main Control Board & SOM Mod PCB	NSP004 – NSP004/G9
11	Nexus IOM Trigger Input PCB 11-240V	NSP009
12	Nexus Add on Pump PCB	NSP005 – NSP005/G9
13	Nexus Display Ribbons	NSP213
14	Nexus Trigger Board Comms Lead Long (10 Metres)	NSP204
15	Nexus Add On Pump Comms Lead Long	NSP202

Item	Description	Spares Code
16	Nexus Add on Pump Comms Lead Short / Nexus Trigger Board Comms Lead Short	NSP201 – NSP203
17	Nexus End Wedge 2 Pack	NSP103
18	Nexus Add on Link 5 Pack	NSP102
19	Nexus Main Cover and Display Kit	NSP104
20	Nexus Main Display Kit	NSP101
21	Nexus Pump Assembly and Looms	NSP208
22	Nexus Motor Looms Harness 4 Pack	NSP206